




800-81RAMTECH

800-817-2683

RAMX025

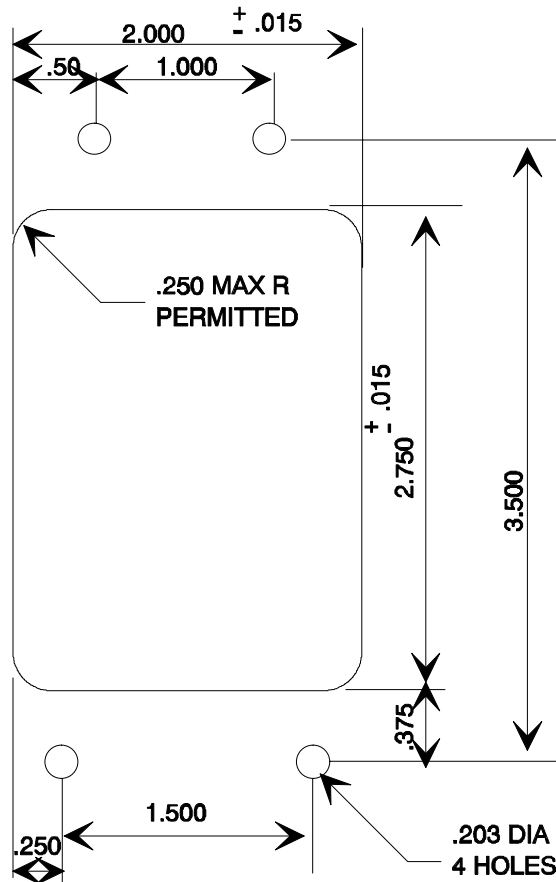

ASSEMBLY OF PANEL MOUNTED HALF (RAMX025)

1. With crimped contacts in the modules, place the modules in the panel mounted half.
2. Install the module screws and nuts . The screws should have lockwashers used with them.
3. Align the modules with each other , and tighten module screws.

NOTE

If desired , the modules can be installed in this connector half after it is attached to a panel. The contacts can be inserted in the modules when convenient